


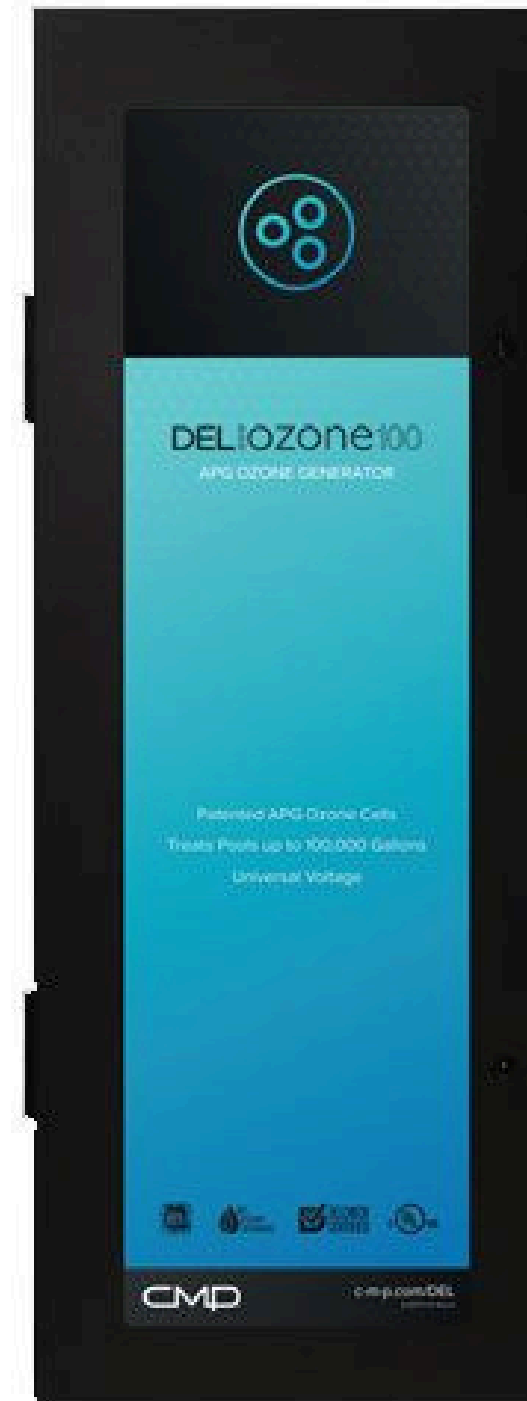

HOW TO WINTERIZE YOUR OZONE SYSTEM



HOW TO WINTERIZE YOUR OZONE SYSTEM

1

STEP 1

Turn off all power in the breaker box located at the pool equipment.

2

STEP 2

Turn inlet ball valve and outlet ball valve off (typically blue or red handles)

3

STEP 3

Open ozone drain line system spigot (this will drain any standing water in the ozone system)

*There are many variations of pool equipment based on the time the pool was built and the variety of pool products available in the marketplace. These instructions are for reference and Hauk Custom Pools is not responsible for any circumstances that result in product damage during the winterizing process or freeze damage.


STEP 1

Turn off all breakers at pool equipment.



STEP 2

Turn both inlet ball valve and outlet ball valve off
(typically blue, red, or grey handles)

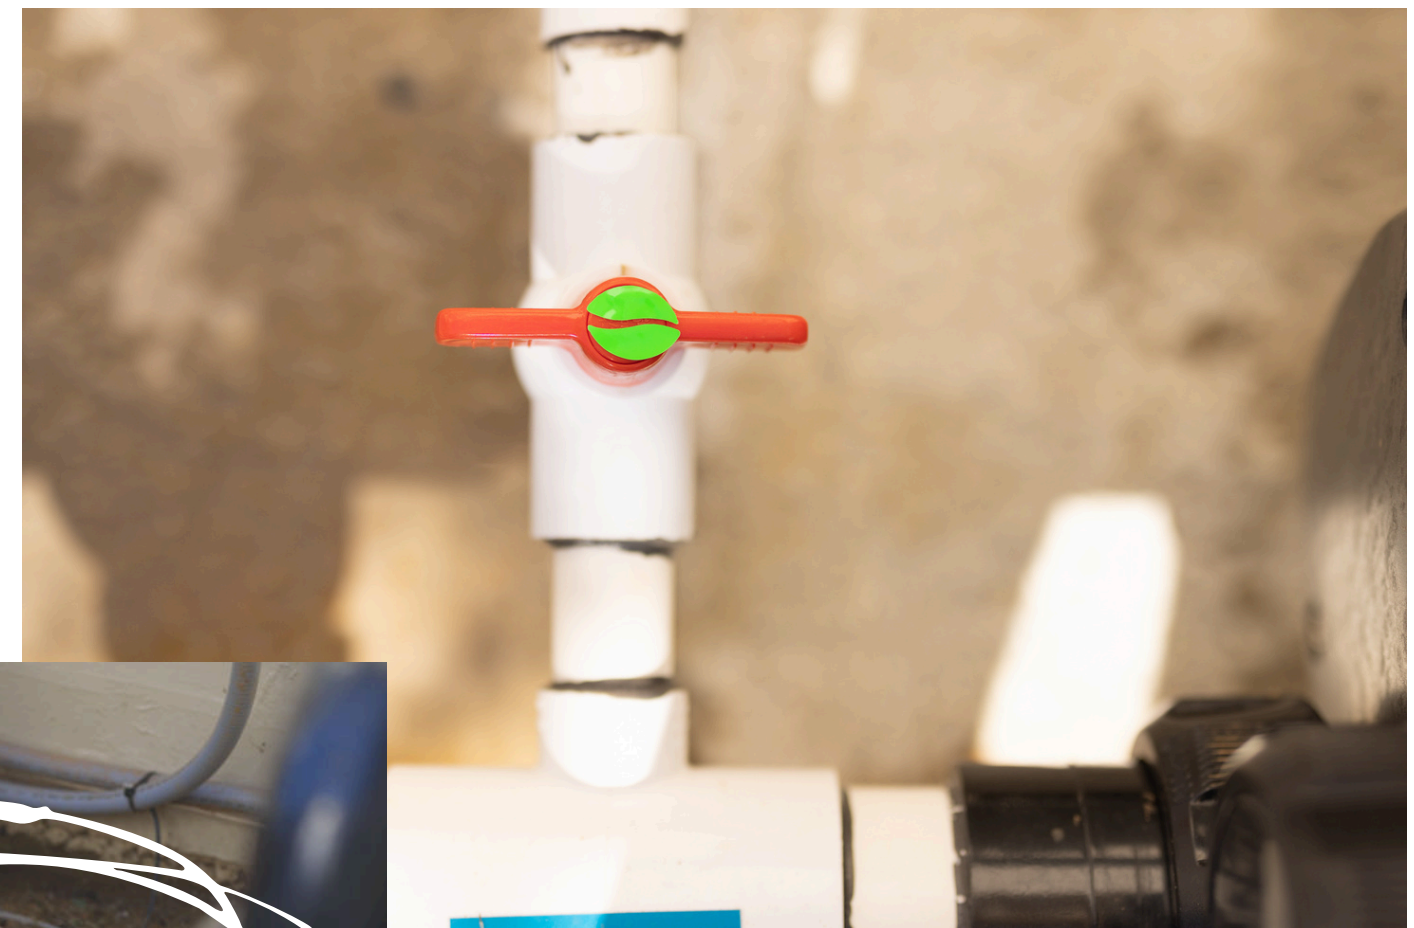

STEP 3

Open both ozone drain line system spigots
(this will drain any standing water in the ozone system)



DHAUK **CUSTOM POOLS**

WWW.HAUKCUSTOMPOOLS.COM



WINTERIZING YOUR OZONE SYSTEM